



NOTE. A zener diode can be placed in the power supply connection to reduce power to comply with your local laws.

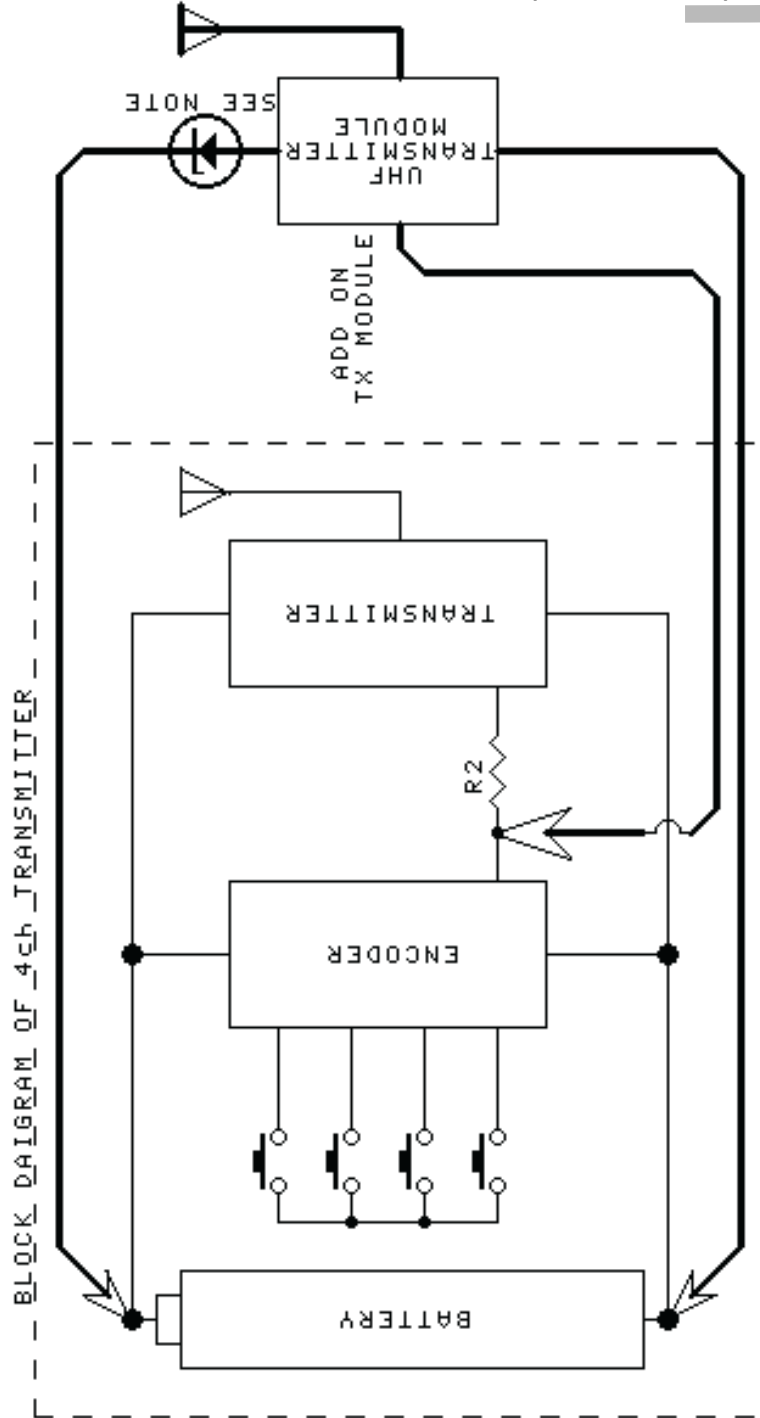

Solder wires to the UHF module and to the battery connections on the original PCB as show. Then solder the data wire to the end of R2 as shown. Cut a small nick into the end of the case for the wires.

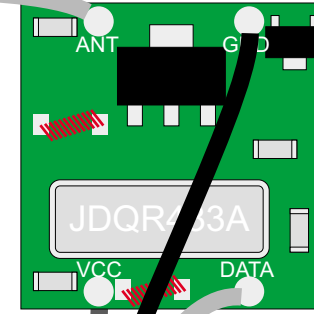

The UHF module should be covered with heatshrink tubing to protect it. Connect 173mm of wire to the ANT connection to form the antenna. The wire should be insulated.

